

# **PAMS Technical Documentation**

## **NSE–8/9 Series Transceivers**


# **Disassembly**

## CONTENTS

	<b>Page No</b>
Dis-assembly .....	3
Removing the B cover .....	3
Removing Battery .....	4
Removing the A-cover .....	5
Removing the antenna and the D-cover .....	6
Removing the microphone, bottom-connector and PCB .....	8
Removing the dome-sheet, display and multi-gasket .....	9

## Dis-assembly

### Removing the B cover

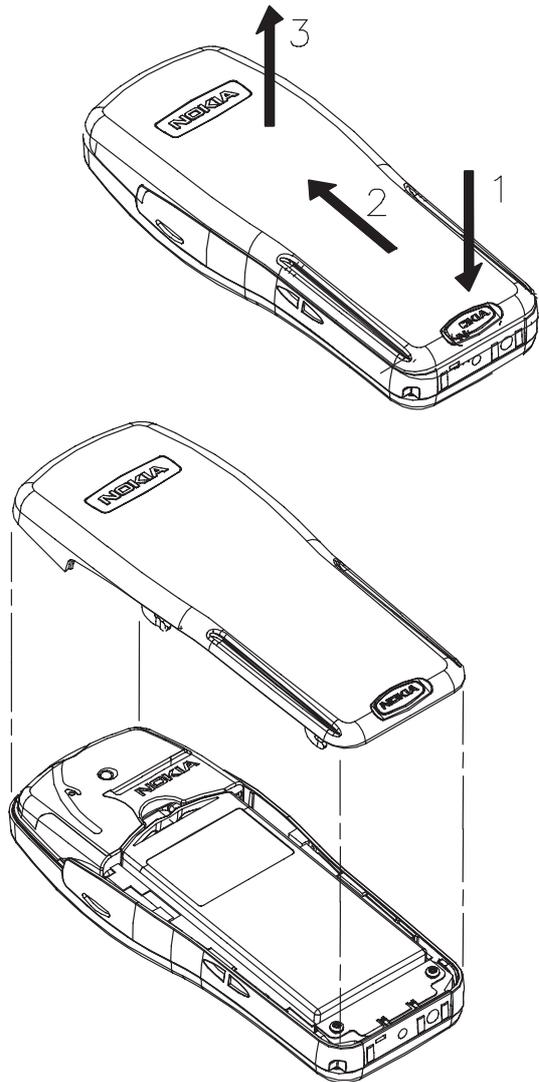

#### STEP 1


Remove the B-cover

Push down Release-button 1

Slide B-cover approx.: 5 mm  
in direction 2


Lift the B-cover up 3.

## Removing Battery

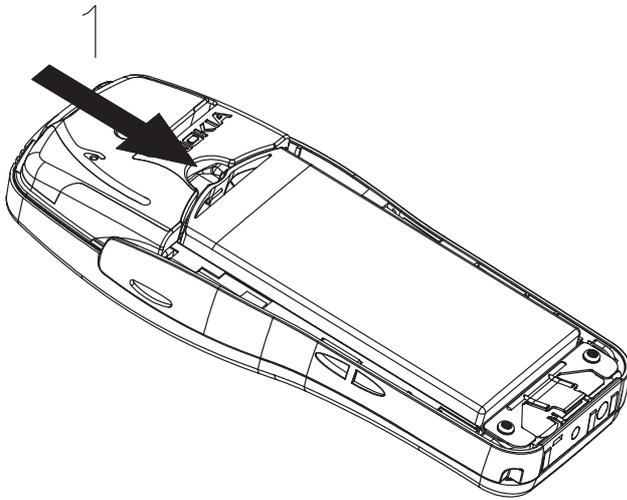


### STEP 2

Remove the battery by pushing the snap 1,

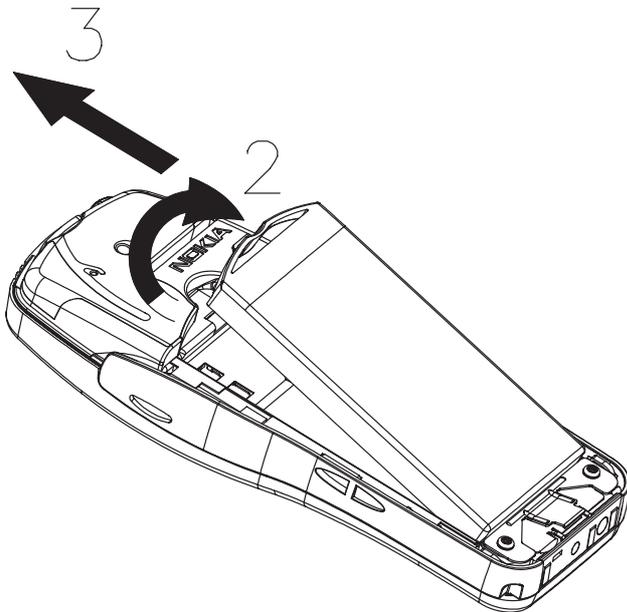


Rotate around the end of the battery and remove it upwards according to 3.

### Removing the A-cover

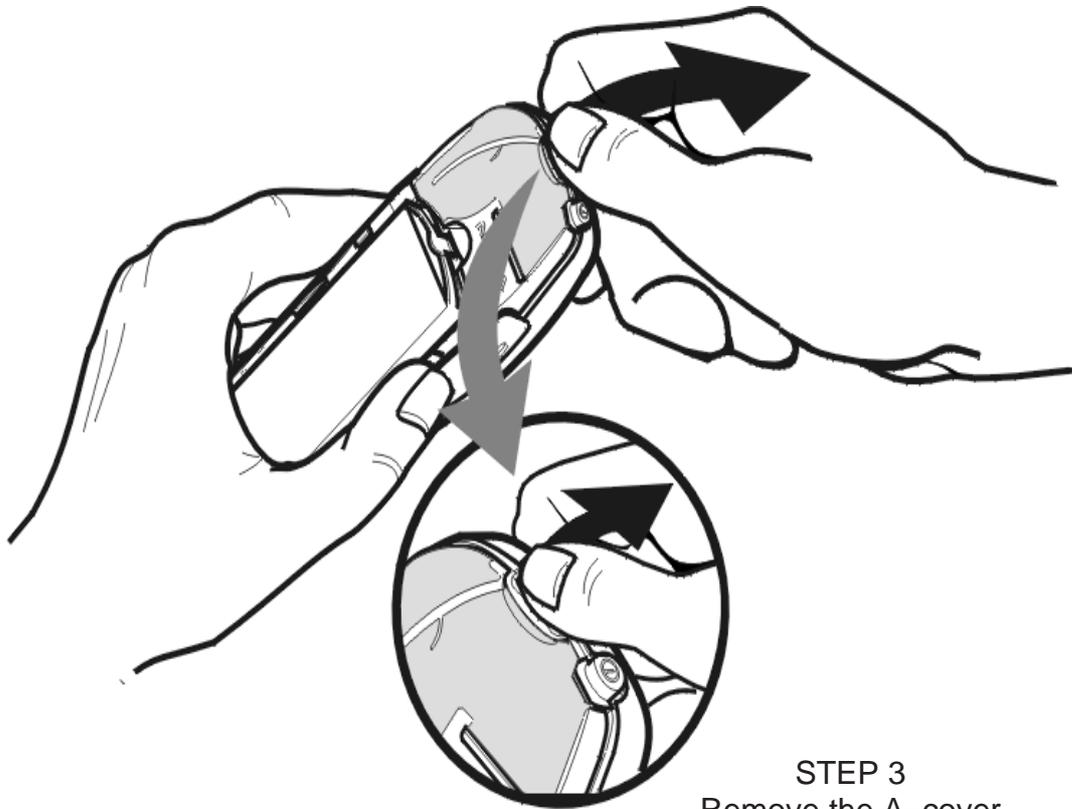

STEP 3  
Remove the A-cover

## Removing the antenna and the D-cover

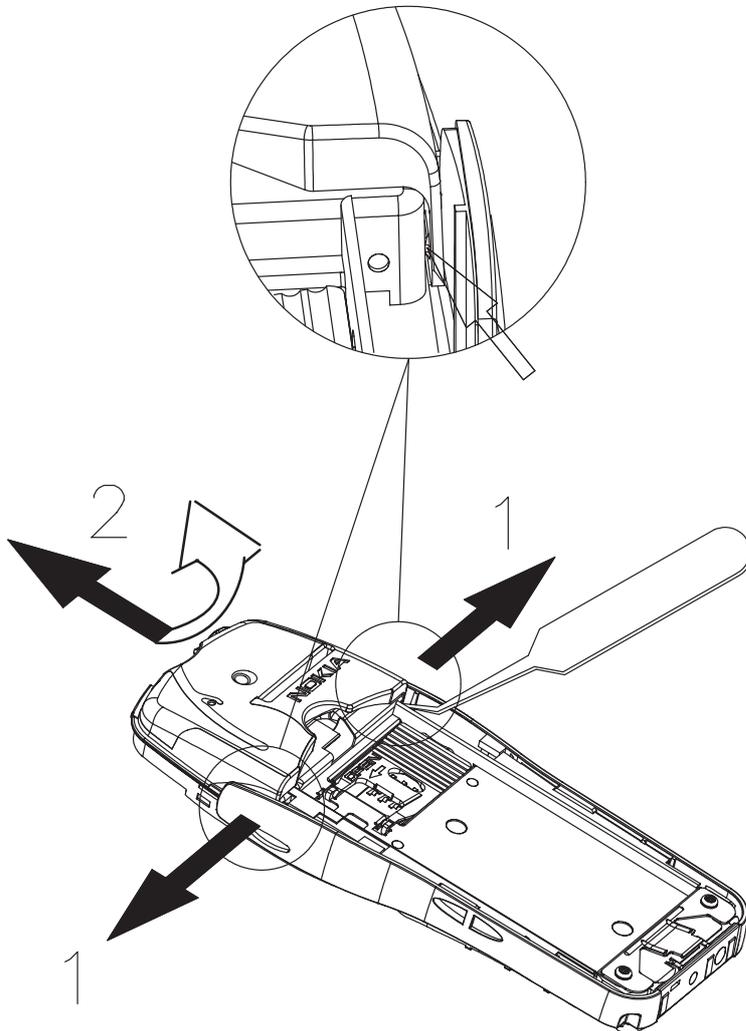


### STEP 4

Remove the antenna, one side at a time


**Only use angled tweezers.**

1. Carefully push the end in between the side of the Antenna and the D-cover.

2. Bend out the side of the antenna carefully and lift the antenna out of the snap fit.

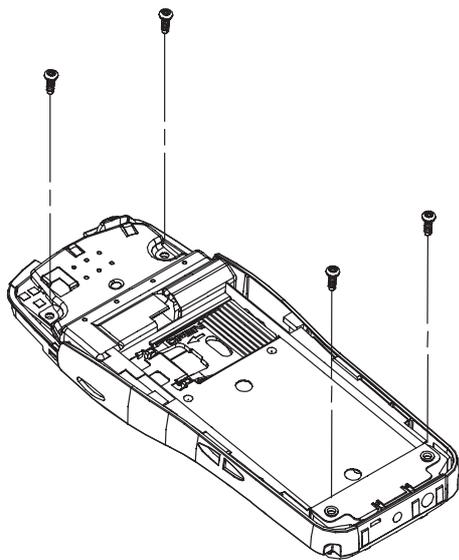**STEP 5**

Remove the screws (4x).  
When assembling, screw  
torque should be 30Ncm. with  
a Screwdriver speed  
500–600rpm

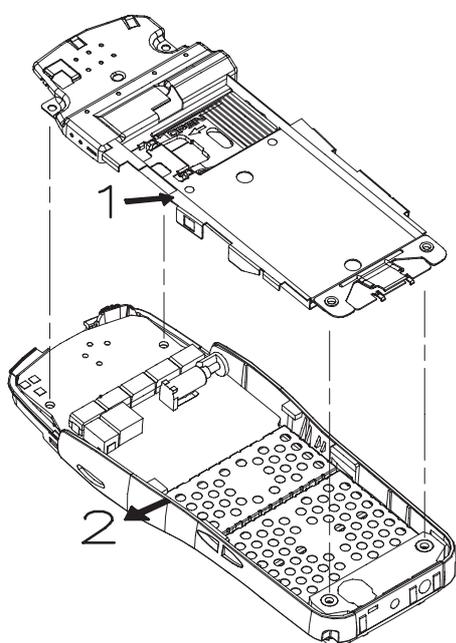**STEP 6**


Remove the D-cover

! Snap Fitting !

Open one side at the time


Push a screwdriver in under  
the D-cover side flap 1 and  
bend out the side of the  
C-cover in the direction  
shown, 2.

## Removing the microphone, bottom-connector and PCB

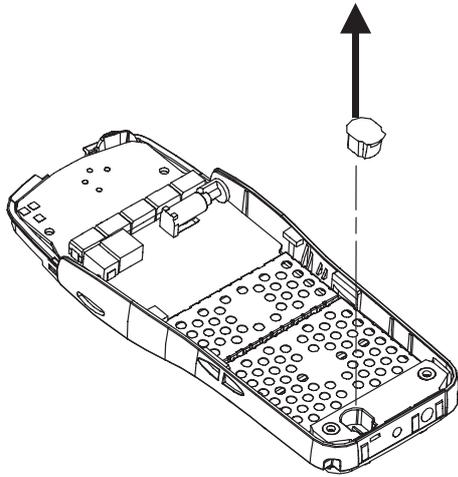


### STEP 7

Remove the Microphone and boot, by pulling straight up.

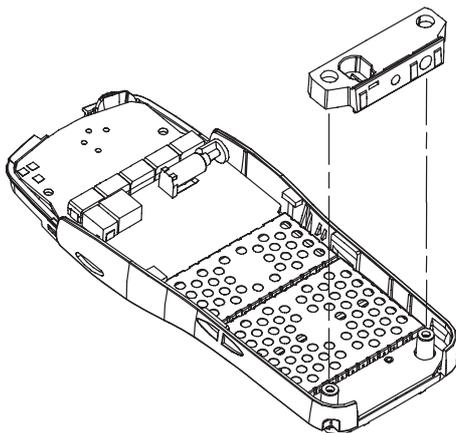

### STEP 8


Remove the bottom-connector

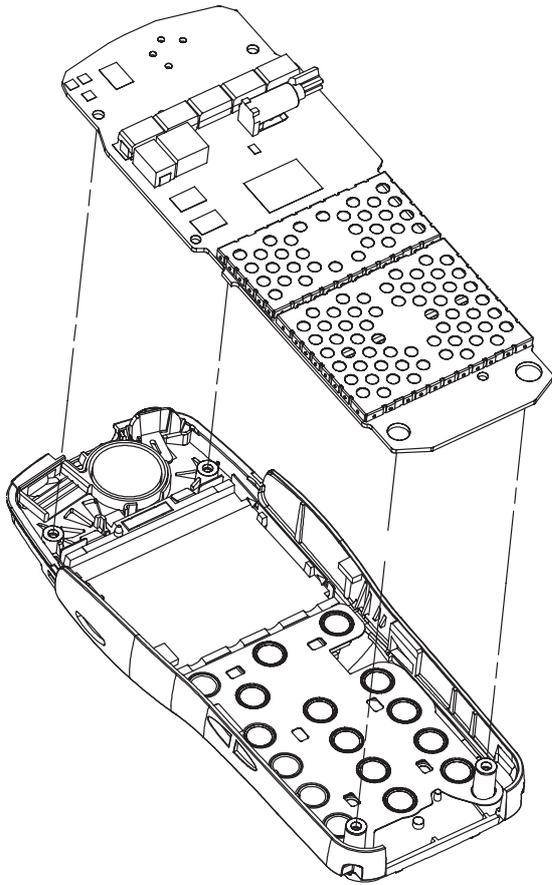

STEP 9


Lift up the PCB

### Removing the dome-sheet, display and multi-gasket

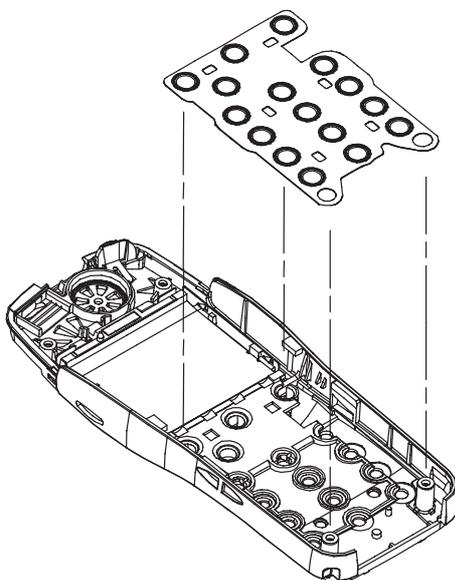


STEP 10

Remove the dome-sheet

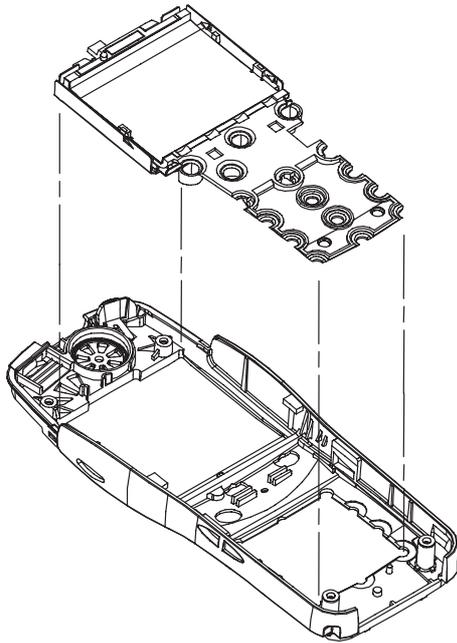

STEP 11  
Remove the display assembly

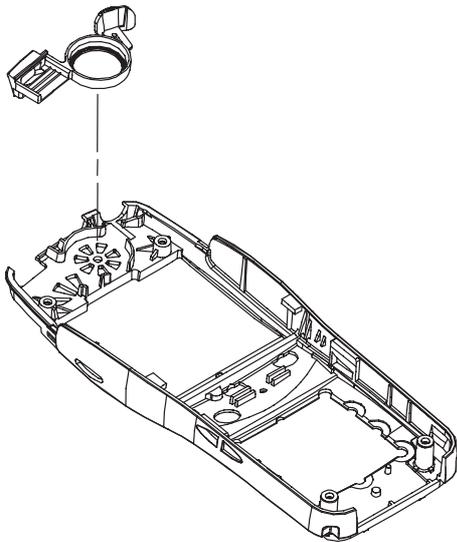

STEP 12  
Remove the multi-gasket