



Programmes After Market Services NHM-5NX Series Transceivers

Disassembly



Table of Contents


	Page No
Disassembly Procedure	3
Remove B Cover	3
Remove Battery	3
Remove A Cover	4
Remove Antenna	4
Remove Screws - Torx#6	5
Remove Lightguide Assembly	5
Remove PCB	6
Remove Speaker	6
D-Cover- Removable Parts	7
Remove Battery Lock	7
Re-Assembly	8
Mount Battery Lock	8
Mount Components in D-Cover	8
Mount PCB in D- Cover	9
Mount lightguide in D-Cover	9
Fastening the Screws	10
Mounting the Antenna	10
Mounting the A-Cover	11
Mounting the Battery	11
Mounting the B-Cover	12

Disassembly Procedure

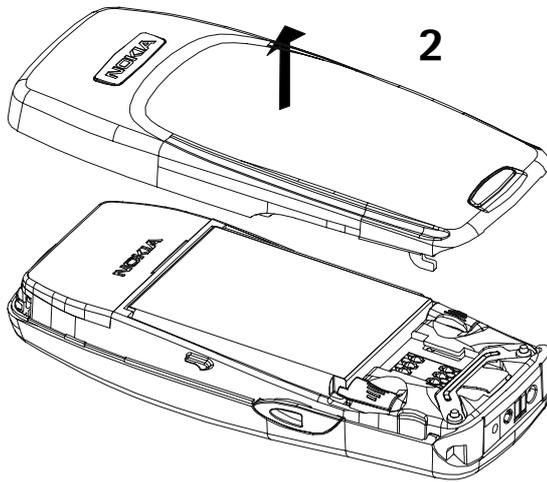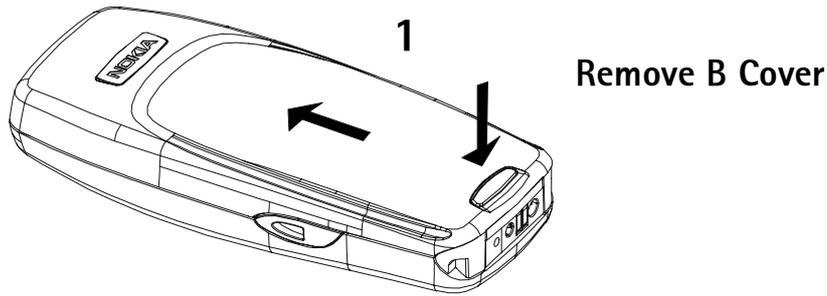

Remove Battery

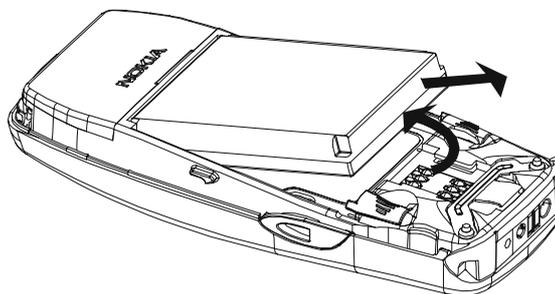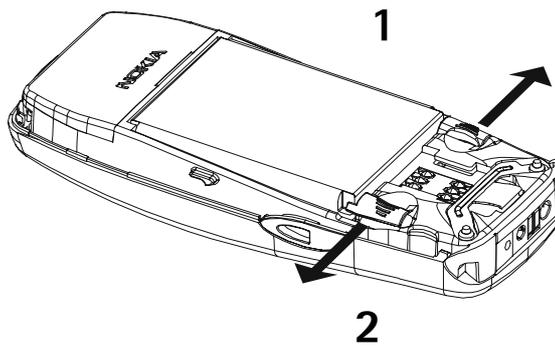

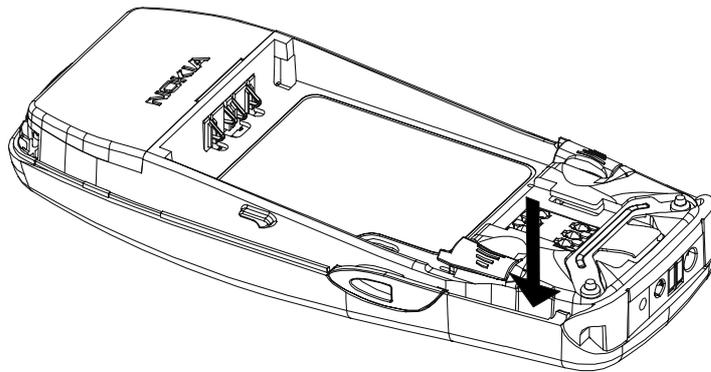



Remove A Cover

Push down the A- cover along the finger groove on the D cover.


Remove Antenna

1. Insert a straight-bladed screwdriver in the slot between the antenna and D-cover at battery point.
2. Pull screwdriver backwards.
3. Lift antenna from D-cover by pulling it forwards

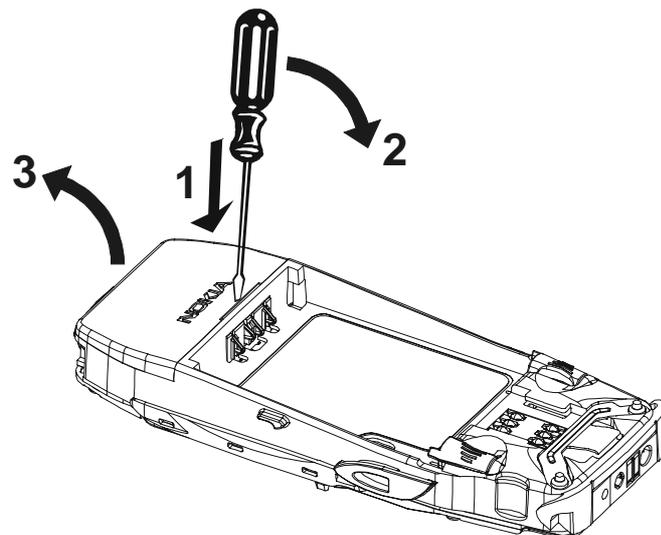

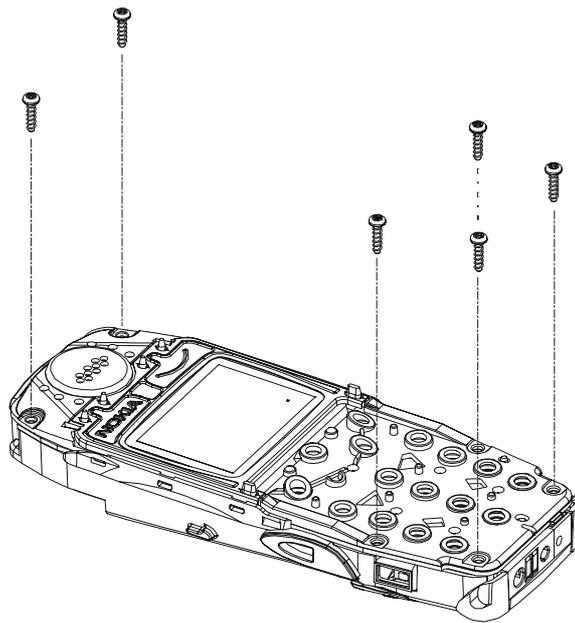


Remove Screws - Torx#6

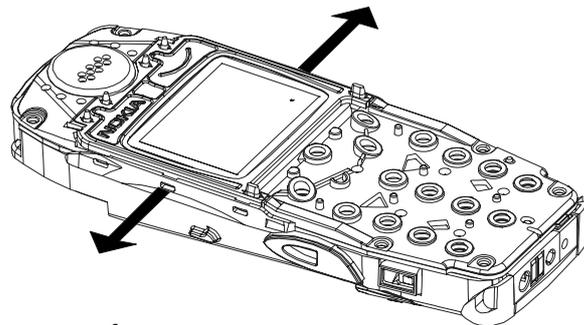


1

Remove Lightguide Assembly


- 1. Use a straight-bladed screwdriver or fingers to gently bend the D-cover flaps away from the lightguide.
- 2. Lift the lightguide out of the retaining flap.

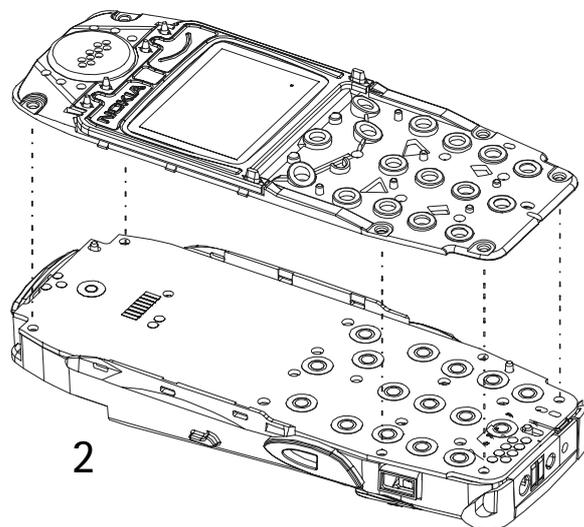


2

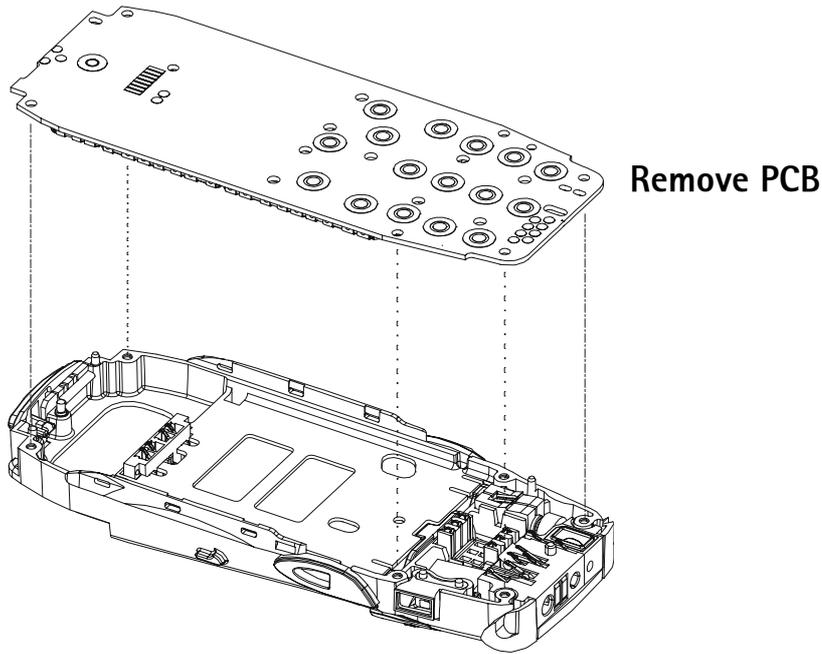

Remove Speaker

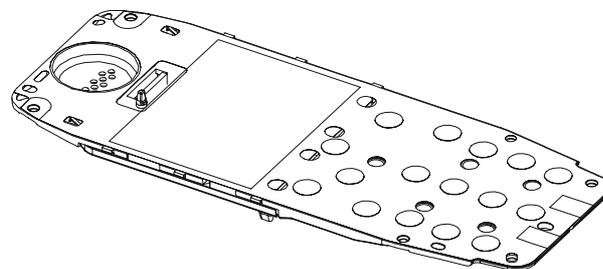

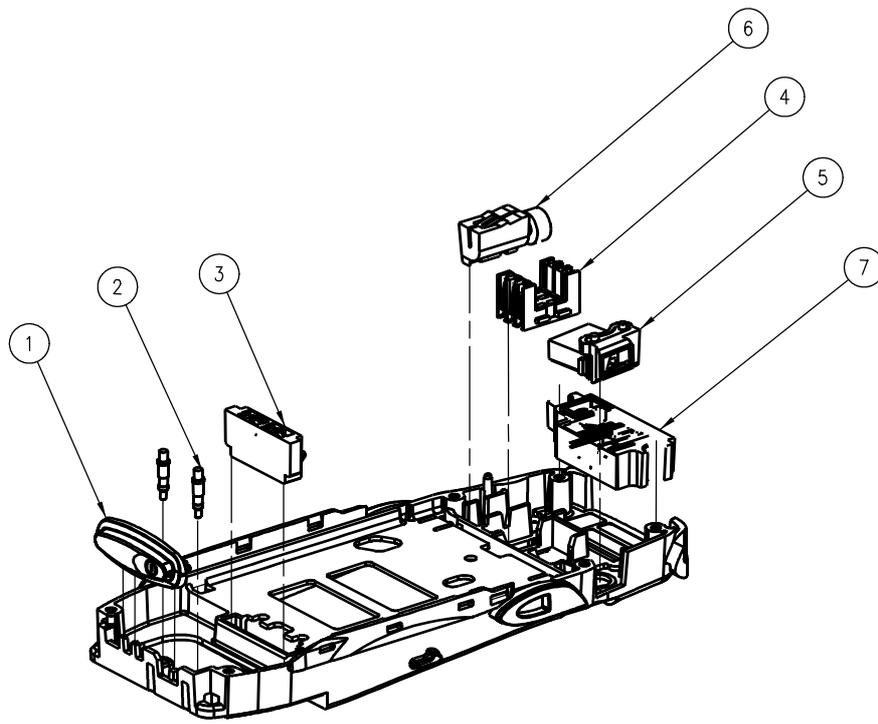

**D-Cover-
Removable Parts**


The following components are removable

- 1. Powerkey
- 2. Antenna Contact
- 3. Battery Connector
- 4. SIM Reader
- 5. Buzzer Assembly
- 6. Vibra Assembly
- 7. Bottom Connector


All components can be exchanged individually. The antenna contacts are pushed out using a torx #6 screwdriver.

Remove Battery Lock

- 1. Push the battery lock up
- 2. Use a screwdriver to push down the retaining ribs
- 3. Remove the battery lock by pushing it forward

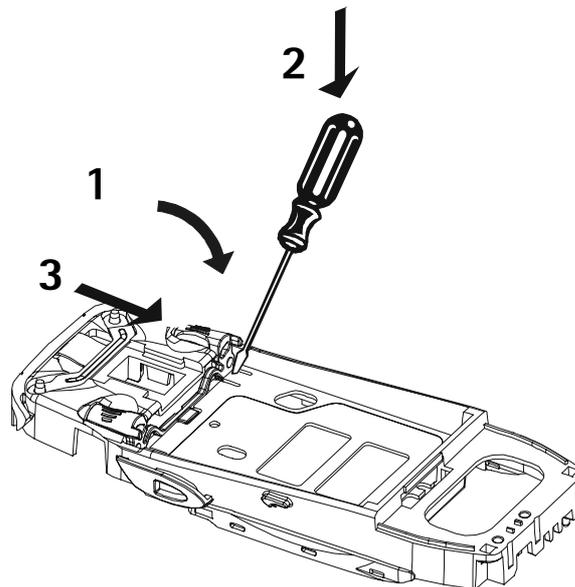

Re-Assembly

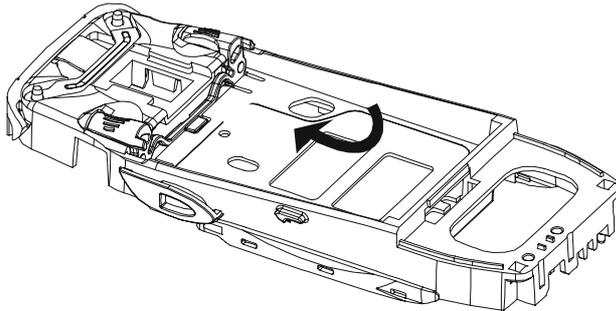



Mount Battery Lock

1. Place battery lock in D-cover
2. push the battery lock down and towards the back until it clicks.

Mount Components in D-Cover

Important: Ensure all components are placed correctly

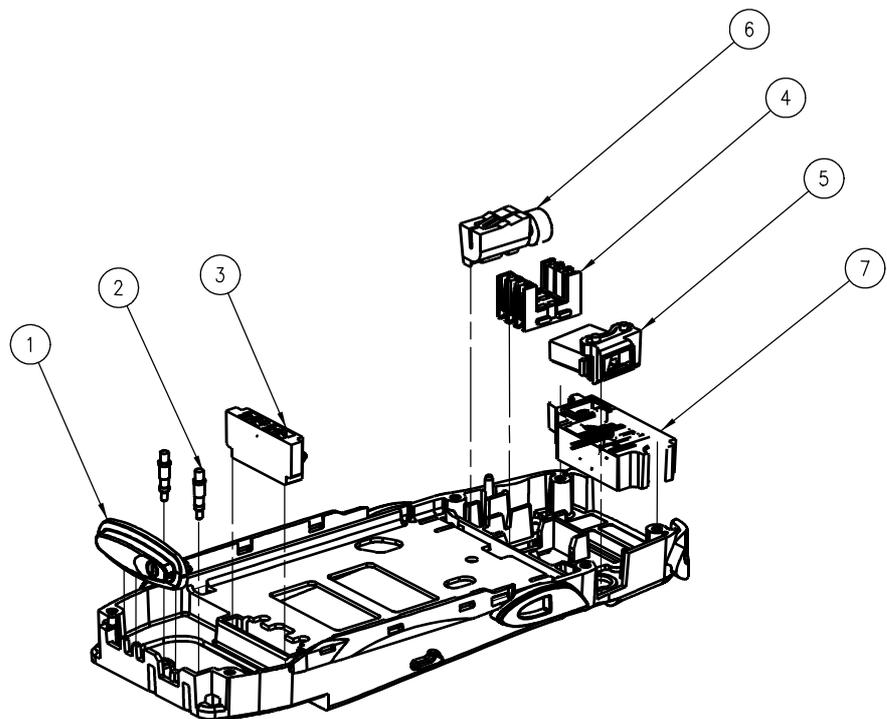


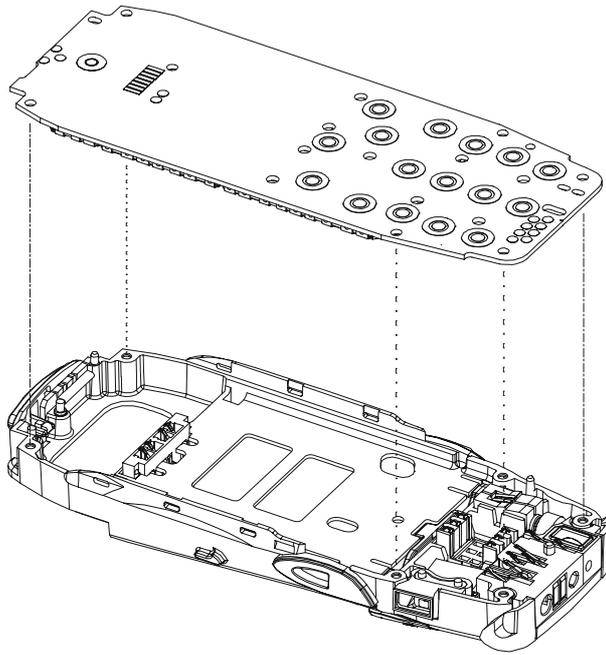



Mount PCB in D- Cover

Mount lightguide in D-Cover

1. Place the lightguide in the D-Cover.
2. Push the lightguide down until retaining flaps snap on.

Note: Check that the speaker is mounted in the lightguide.

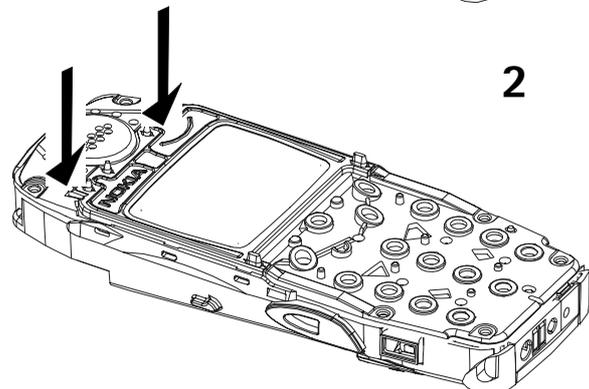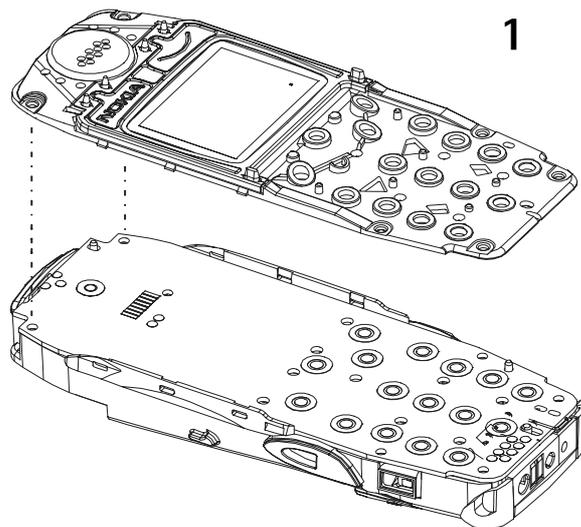

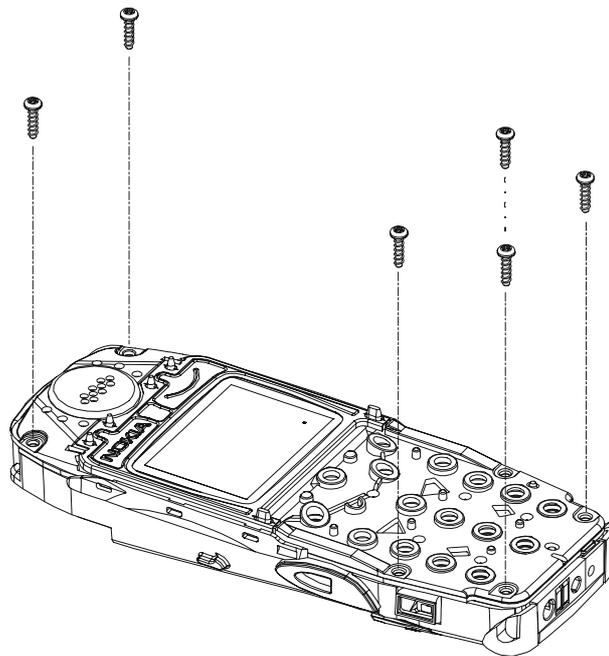



Fastening the Screws

Use a torx #6 screwdriver to fasten the screws. **Max torque 18Ncm at 300RPM**

Mounting the Antenna

Place the antenna hooks in the D-Cover. Push down the antenna until it locks in the snap.

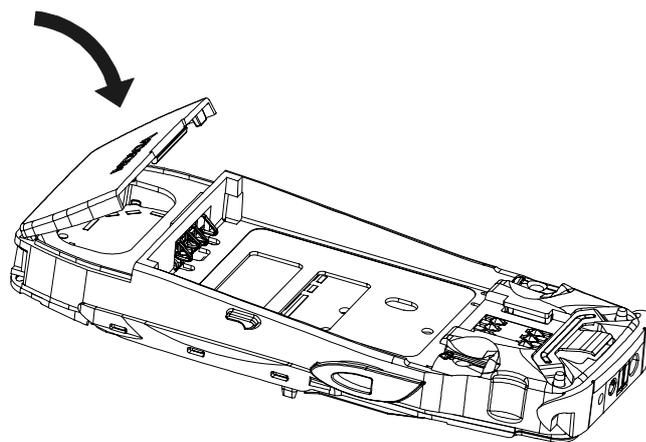


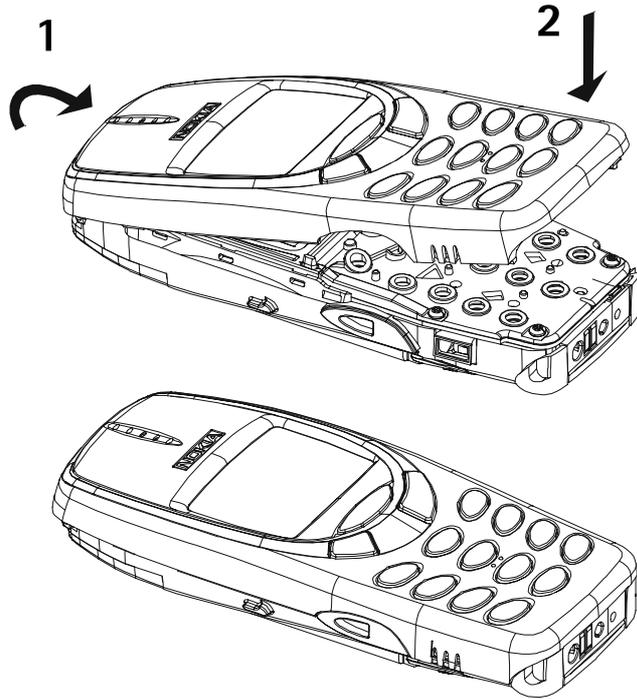



Mounting the A-Cover

1. Slide the A-Cover on to the D-Cover
2. Push down the lower end of the A-Cover until it snaps on.

Mounting the Battery

1. Slide the battery side with the PCB pads under the hooks in the D-cover.
2. Push down the battery until it locks.

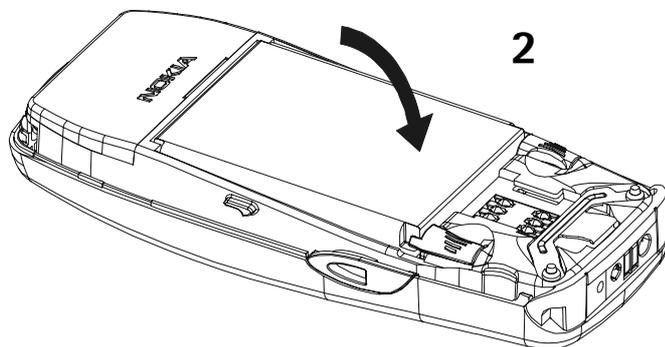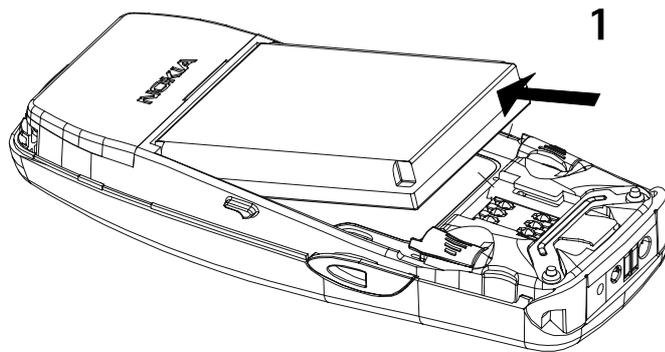

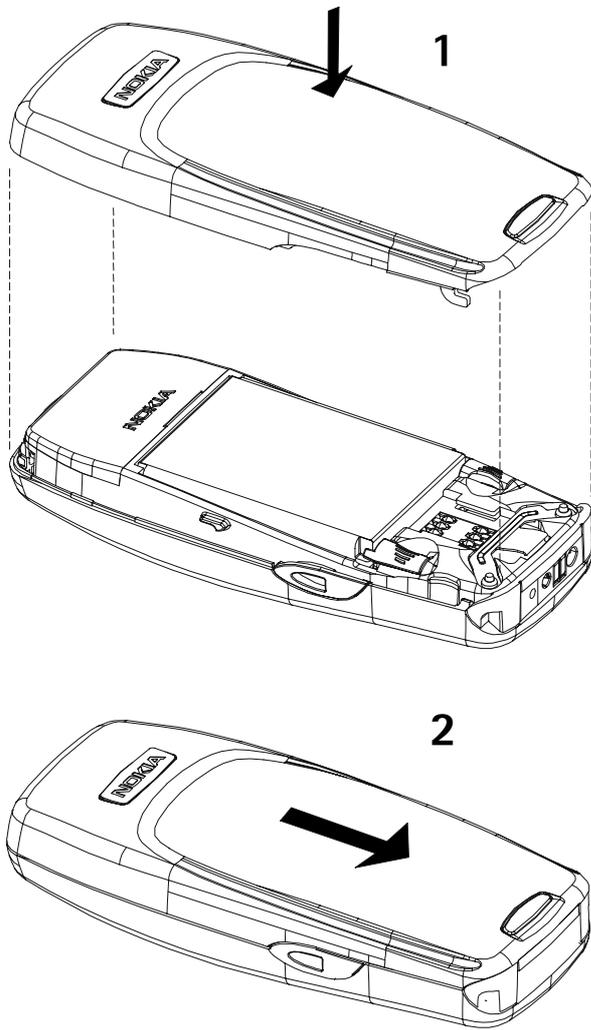

Mounting the B-Cover